






# Instructions for unload flexitank goods

1. . Need to buy tools as shown below: pump, pipe, quick connect, wire and so on.

PICTURE	Auxiliary device name	Number of configurations	USES	NOTES
	Water pump (vacuum pump, centrifugal pump or gasoline pump, etc.)	Can be configured according to loading and unloading	Loading and unloading of liquid cargo, according to site requirements, the installation of the pump can be fixed or moved.	Provided by the manufacturer, operator, carrier
	Pipe (3 inches, 2 inches) (steel hose, food grade steel hose)	It can be installed and configured according to the pump body and loading and unloading site.	Loading and unloading of liquid cargo, installation and configuration of pipe length and position according to site requirements	Provided by the manufacturer, operator, carrier
	Quick connector (3' ' , 3' ' change 2' ' )	Configure according to the number of pipes and install the quick connector and pipe)	Loading and unloading of liquid cargo, after the pipe is connected to the quick connector, it will be quickly attached to the valve of the liquid bag for loading and unloading of the cargo.	Provided by the manufacturer, operator, carrier

2. As pictures





3. Don't open the left door when unload the liquid.



4. In order to make the unloading more clean and quick-connect, you can operate as shown below when unloading to the end:

